

How to install a roman blind

Step one : parts

Check if you received all the necessary items

- * The correct amount of roman blinds
- * Necessary brackets: the number of brackets for each roman blind is the same as the number of lift cords that are used for that roman blind

Step Two: Installing the brackets

2.A Inside mount installation:


Put screws through the top of the bracket. Make sure that there is minimum 5 mm of free space behind the bracket. To click in the system, the bracket needs to be able to bend a little bit.

The two end brackets should be placed 10 cm from the end of the headrail. Based on the width of the shade, you place the remaining brackets between the two end brackets


2.B Outside mount installation:

Place screws through the rear of the bracket. Make sure that there is minimum 5 mm of free space above the bracket. To click in the system, the bracket needs to be able to bend a little bit.


The two end brackets should be placed 10 cm from the end of the headrail. Based on the width of the shade, you place the remaining brackets between the two end brackets.

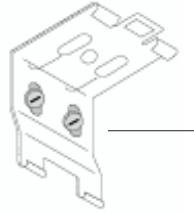

brackets = # lift cords

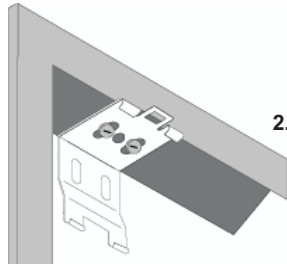

2.A Inside mount

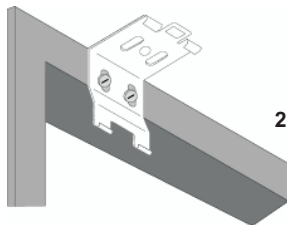

2.B Outside mount

Step Three Installing the shade

3.A Installing:

Place the rear bottom of the headrail in the bracket and click the system in the brackets. For large blinds, you start with the middle brackets and work towards the end of the headrail.

3.B Removing the headrail:

* Inside mount (A)


Press horizontally to the headrail. The bracket will release the headrail.

* Outside mount (B)

Press the headrail to above. The brackets will release the headrail.

* Using a screwdriver (C)

can always insert a screwdriver between the headrail and the brackets in the slot of the release tab which extends out slightly from each bracket. Gently twist the screwdriver to release the bracket from the headrail.

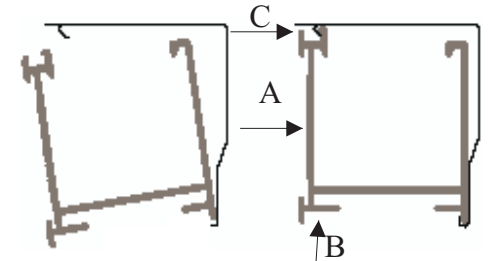

3.B Removing the headrail

A = removing with inside mount placement
B = removing with outside mount placement
C = removing with screwdriver

Shadow Belgium

Ovenstraat 12, 8800 Roeselare, Belgium

www.shadow-inside.be

"Made in Belgium"